

ETACS PIN NO. AND DESCRIPTION (2.5 CRDI 2003)

6	5	4	X			3	2	1
15	14	13	12	11	10	9	8	7

Connector "A"

10	9	8	7	6	X			5	4	3	2	1
23	22	21	20	19	18	17	16	15	14	13	12	11

Connector "B"

6	5	4	X			3	2	1
14	13	12	11	10	9	8	7	

Connector "C"

PIN NO.	CONNECTOR "A"	PIN NO.	CONNECTOR "B"	PIN NO.	CONNECTOR "C"
A1	Remote key setting terminal	B1	TNS switch	C1	Rear fog lamp relay
A2	ACC	B2	Passenger door actuator switch	C2	Seat belt warning lamp
A3	Keyless switch	B3	Seat belt switch	C3	Tail gate open relay
A4	Driver door switch	B4	Main door switch (LOCK)	C4	Door lock fuse
A5	Tail gate switch	B5	Front door key switch (LOCK)	C5	Front left door unlock
A6	Rear defroster switch	B6	Horn relay	C6	Door lock relay (LOCK)
A7	B+	B7	Rear defroster relay	C7	Front windshield heating relay
A8	IG1	B8	Wiper relay	C8	Ignition key hole lamp
A9	Crash unlock	B9	Wiper switch	C9	Ground
A10	Speed sensor	B10	TNS relay	C10	Tail gate open warning lamp
A11	4 door switch	B11	Drive door actuator switch	C11	Room lamp
A12	Passenger door switch	B12	Front windshield heating switch	C12	ALT "L"
A13	Tail gate key switch (LOCK)	B13	Head lamp switch	C13	Super lock relay
A14	Tail gate glass switch	B14	Main door switch (UNLOCK)	C14	Door lock relay (UNLOCK)
A15	120 km over speed (Middle east)	B15	Front door key switch (UNLOCK)		
		B16	Door warning lamp		
		B17	-		
		B18	-		
		B19	Hazard relay		
		B20	Power window relay		
		B21	Wiper switch		
		B22	Wiper switch		
		B23	Ground		

CIRCUIT DIAGRAM

